

Important NeXus user controls

Power button – Slide left to turn power on or off. Slide right to “hold” controls, preventing you from accidentally pressing a button.

Arrow buttons – Select menu entries, change channels, cycle through categories, skip to next or previous songs, and more

Left arrow button – Pressing the left arrow button allows you to “back out” of any menu you have selected.

Home cradle

Audio, power, and antenna connections

IR window – Point the remote here

Earbud jack

Display

XM Passport

Pause/Mute – Pause playback or mute live XM

Volume

XM button – Start here; press to access channels, playlists, menus, and confirm selections

Digital antenna jack

USB jack

